


MIMI BRK

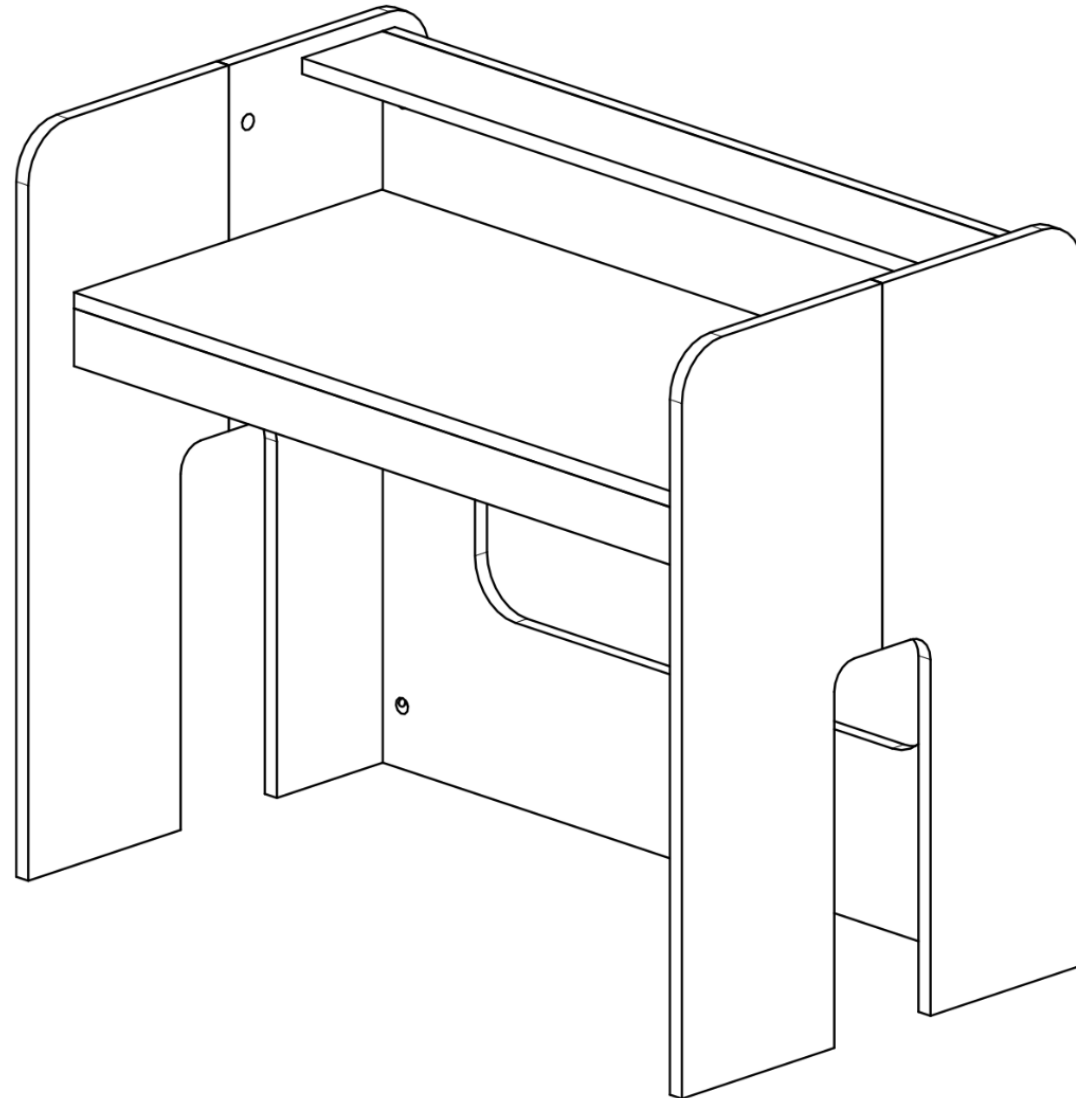


PLEASE READ BEFORE ASSEMBLY

- 1) Make sure there is enough free space for installation.
- 2) Before fully unpacking, please measure the elements whether they match the order.
- 3) After unpacking the elements from the boxes, please check the completeness of the set with the assembly instructions – if you find that something is missing – let us know and if necessary, we will send the missing parts.
- 4) Consider whether you will need help with assembly, if you find it necessary, find someone to help you.
(For bunk beds assembly, we recommend two people).
- 5) The installation of wooden dowels must be done on a solid, flat surface. By using a hammer in this process, remember not to use too much force.

REMEMBER!


NEVER HAMMER WOODEN DOWELS IN THE AIR OR WITHOUT SUPPORT!

RECOMMENDED ASSEMBLY TOOLS

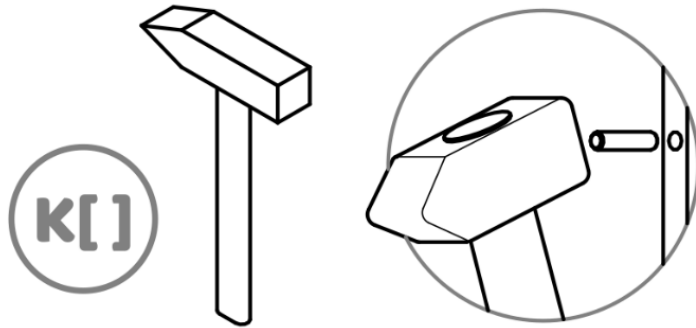

K[]


HAMMER for DOWELS

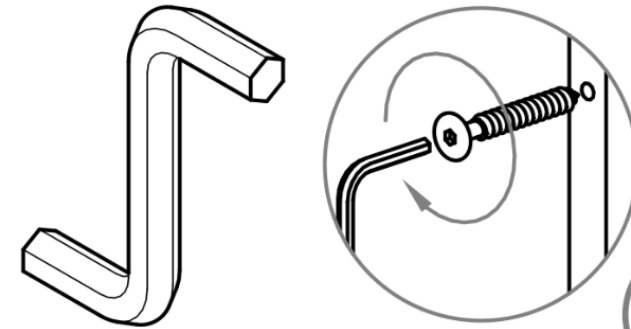


S[]

Included in assembly kit!

ALLEN KEY for SCREWS

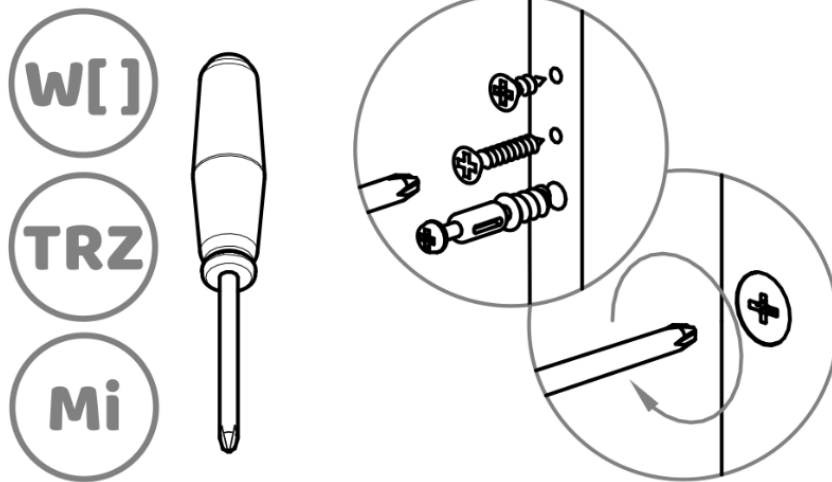


SCREWDRIVER for
BOLTS & ECCENTRICITIES

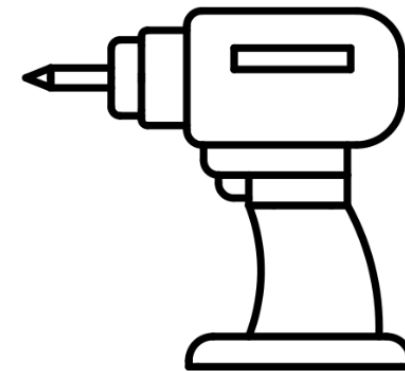


CORDLESS SCREWDRIVER

To avoid damaging furniture
use only low power mode


NLP

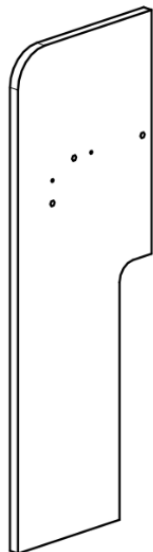


NLT

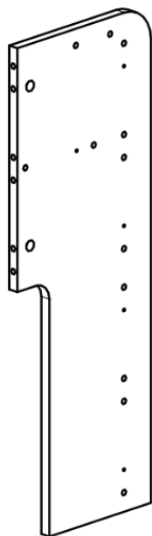


NPP

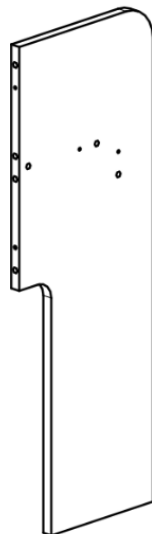

NPT

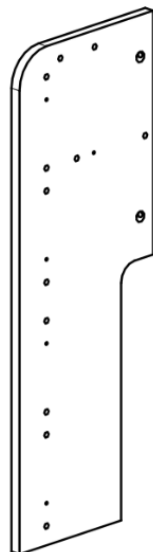

BK

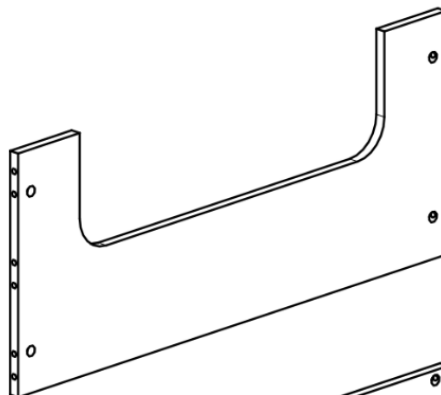


WSP



PK




BL

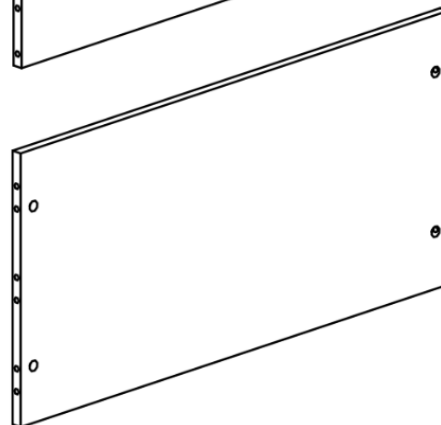

Mi



TRZ M5X35



K8 M8X35

SCREWS

Mi

x18

TRZ

x18

K8

x38

MIMI BRK

NLP x1

NLT x1

NPT x1

NPP x1

BK x2

WSP x1

PK x1

BL x1



K8 M8X35




TRZ M5X35




Mi


NLP

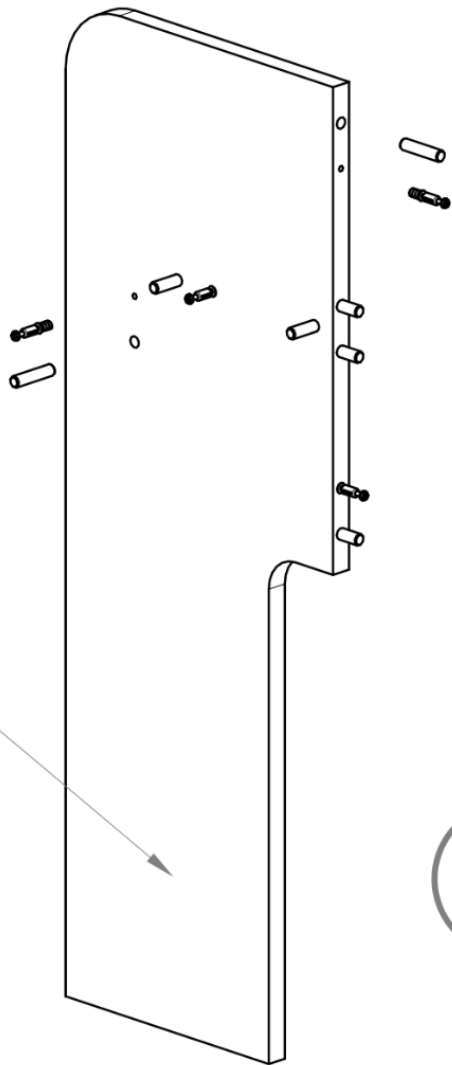


NLT

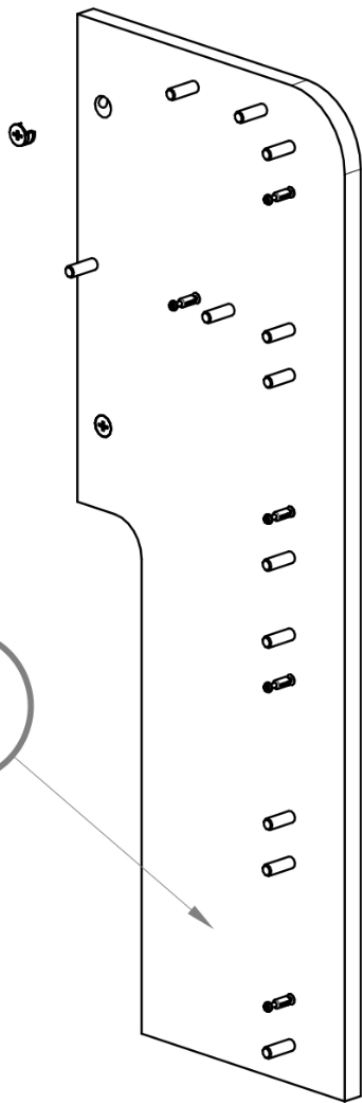


TRZ


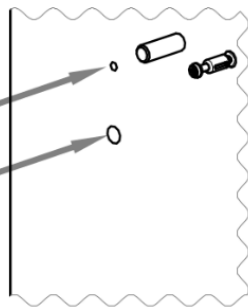



K8

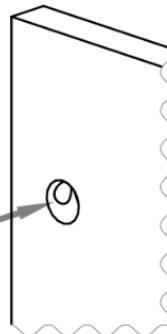


Mi

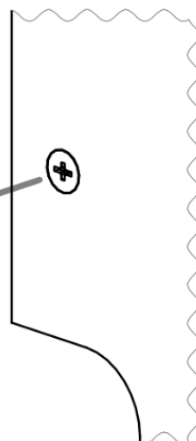


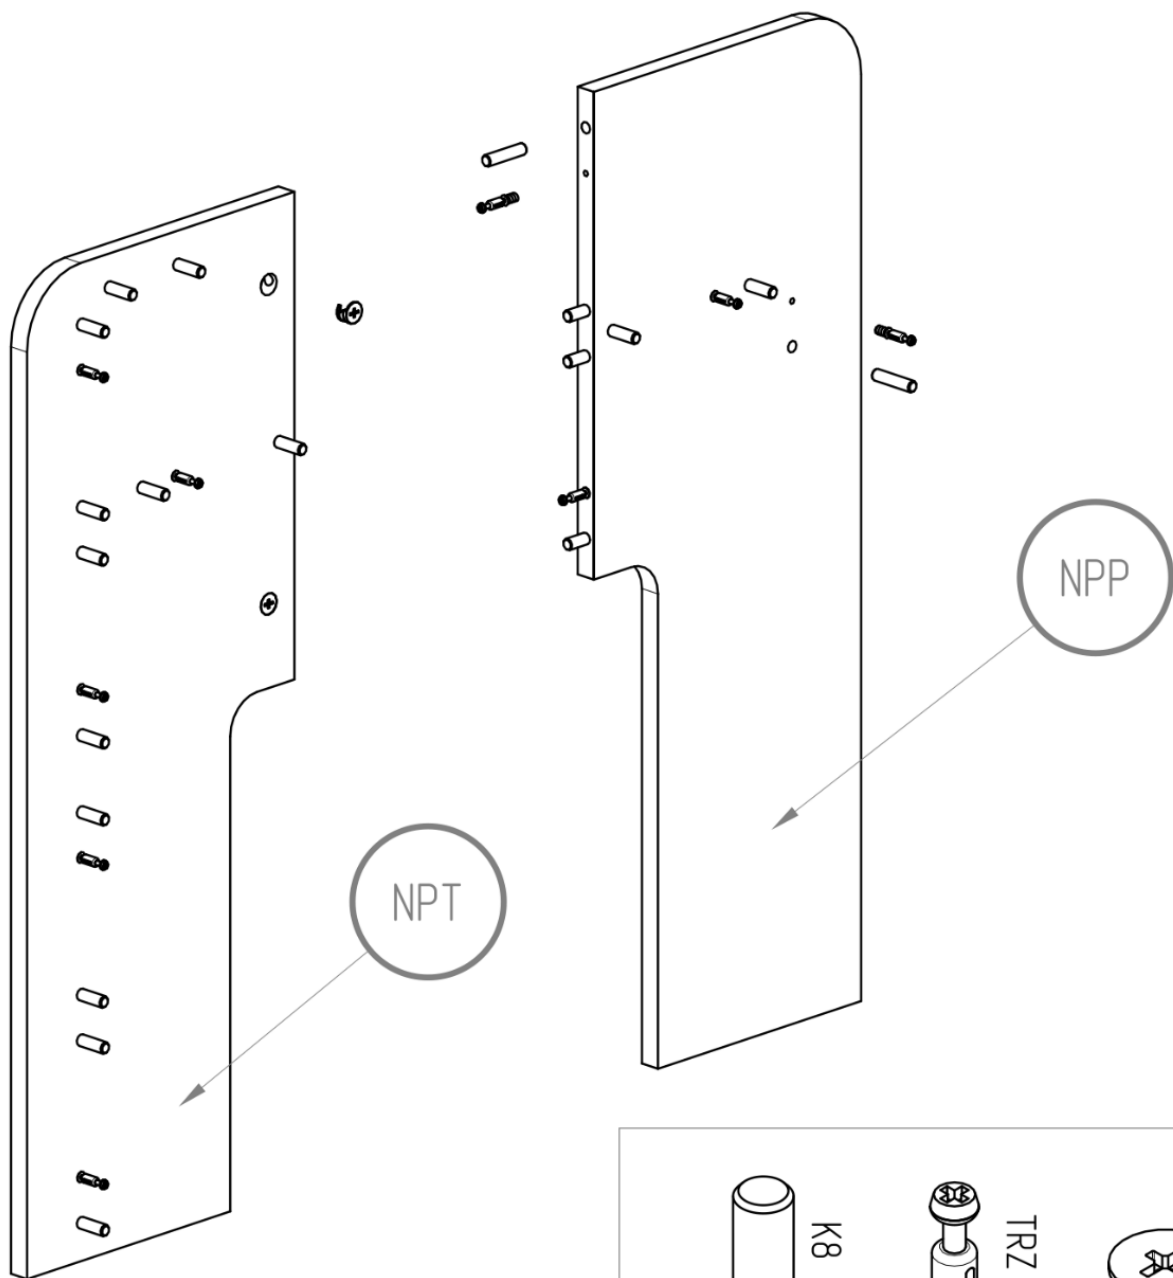
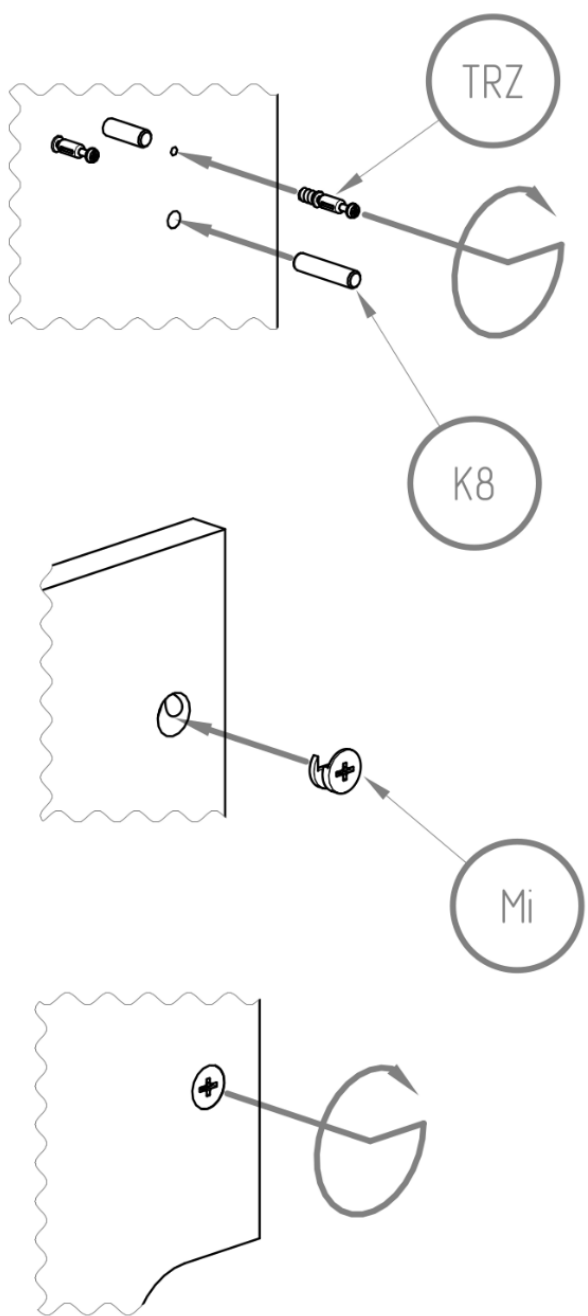


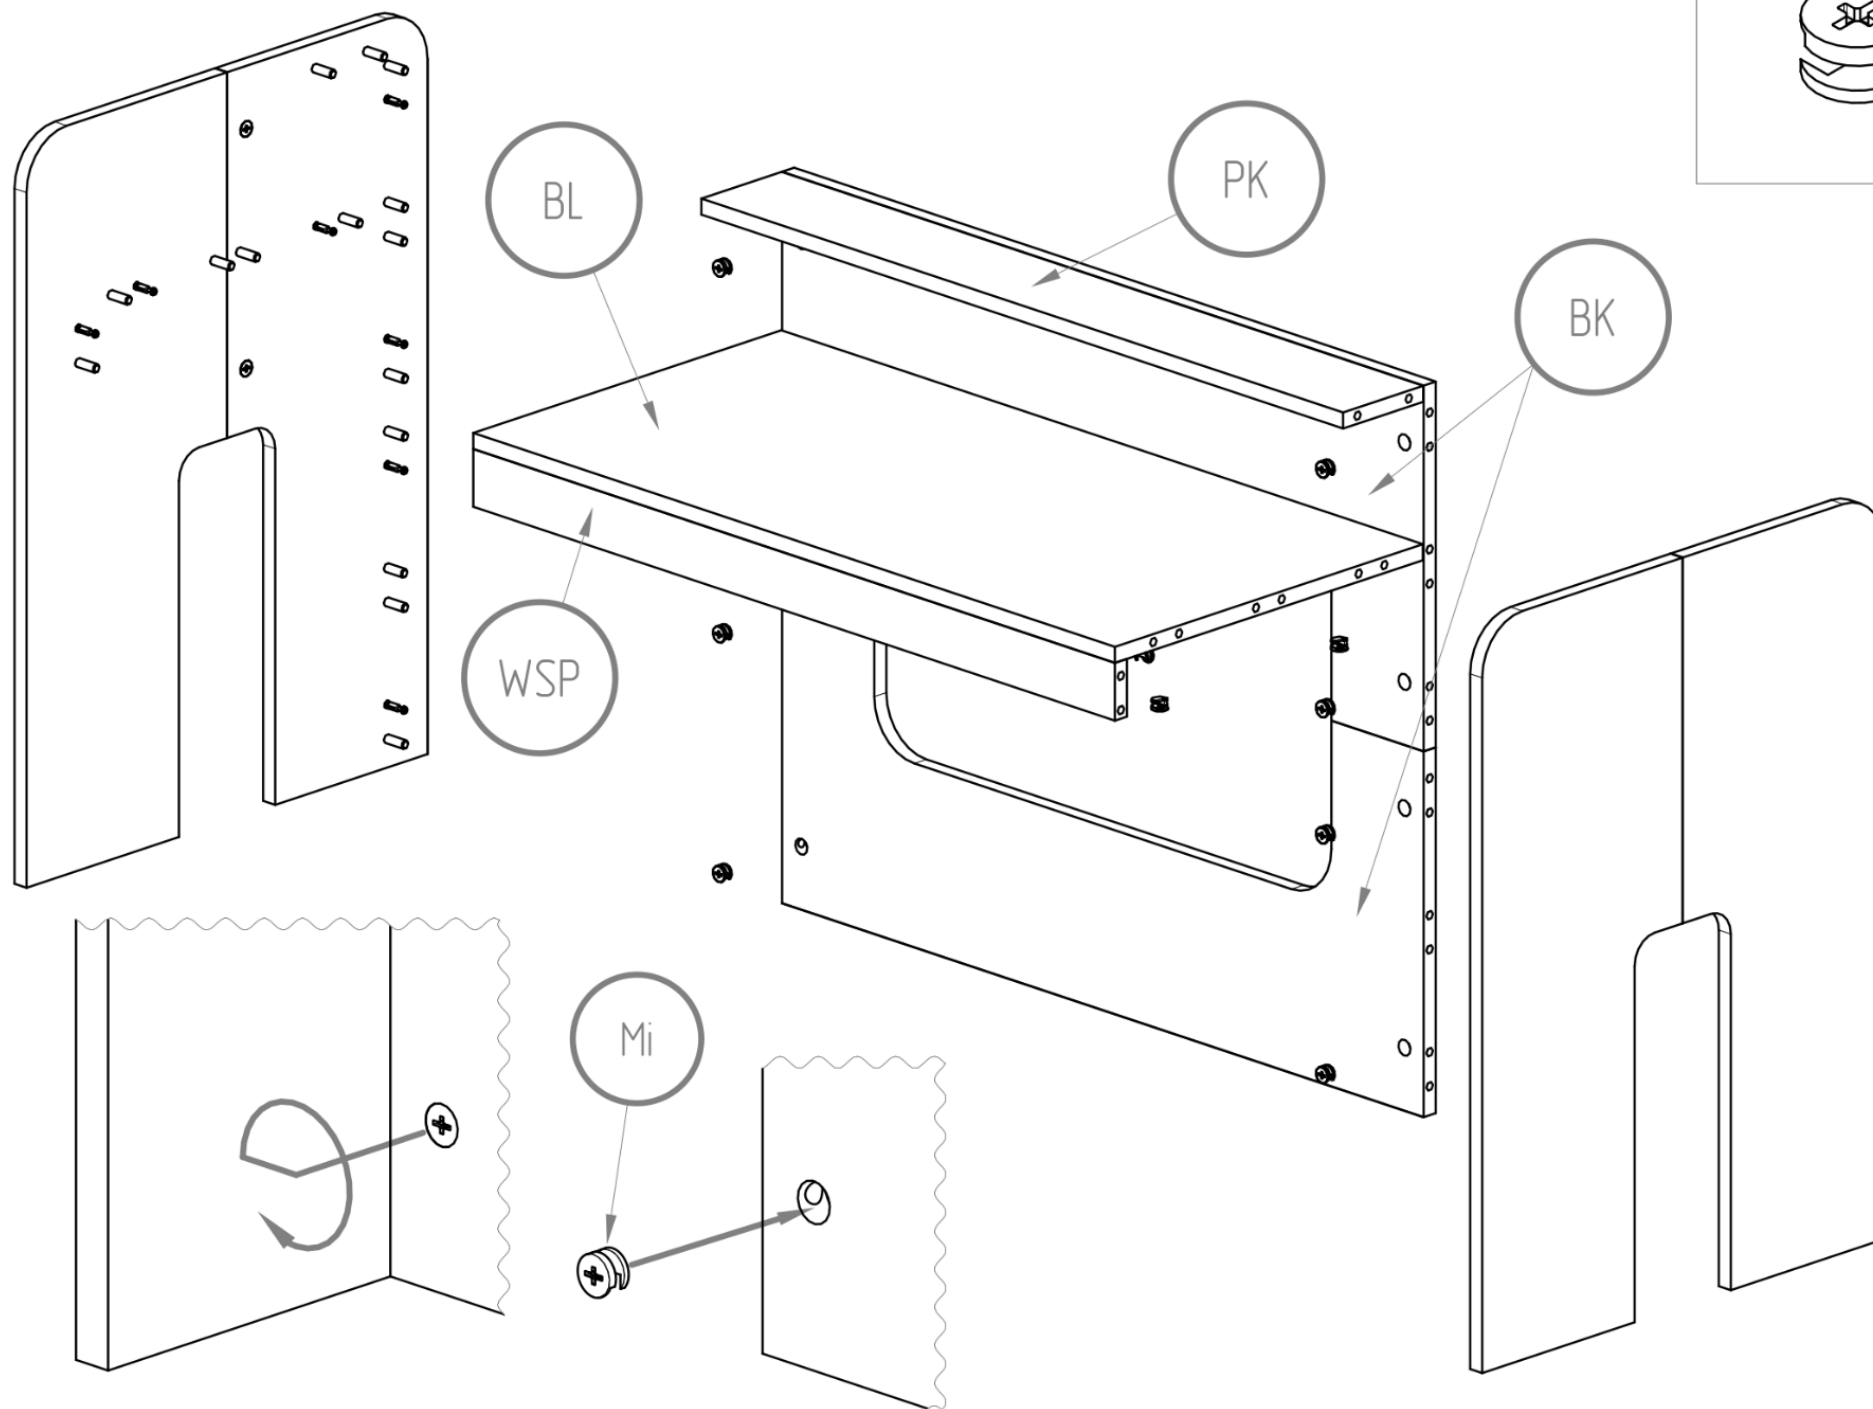

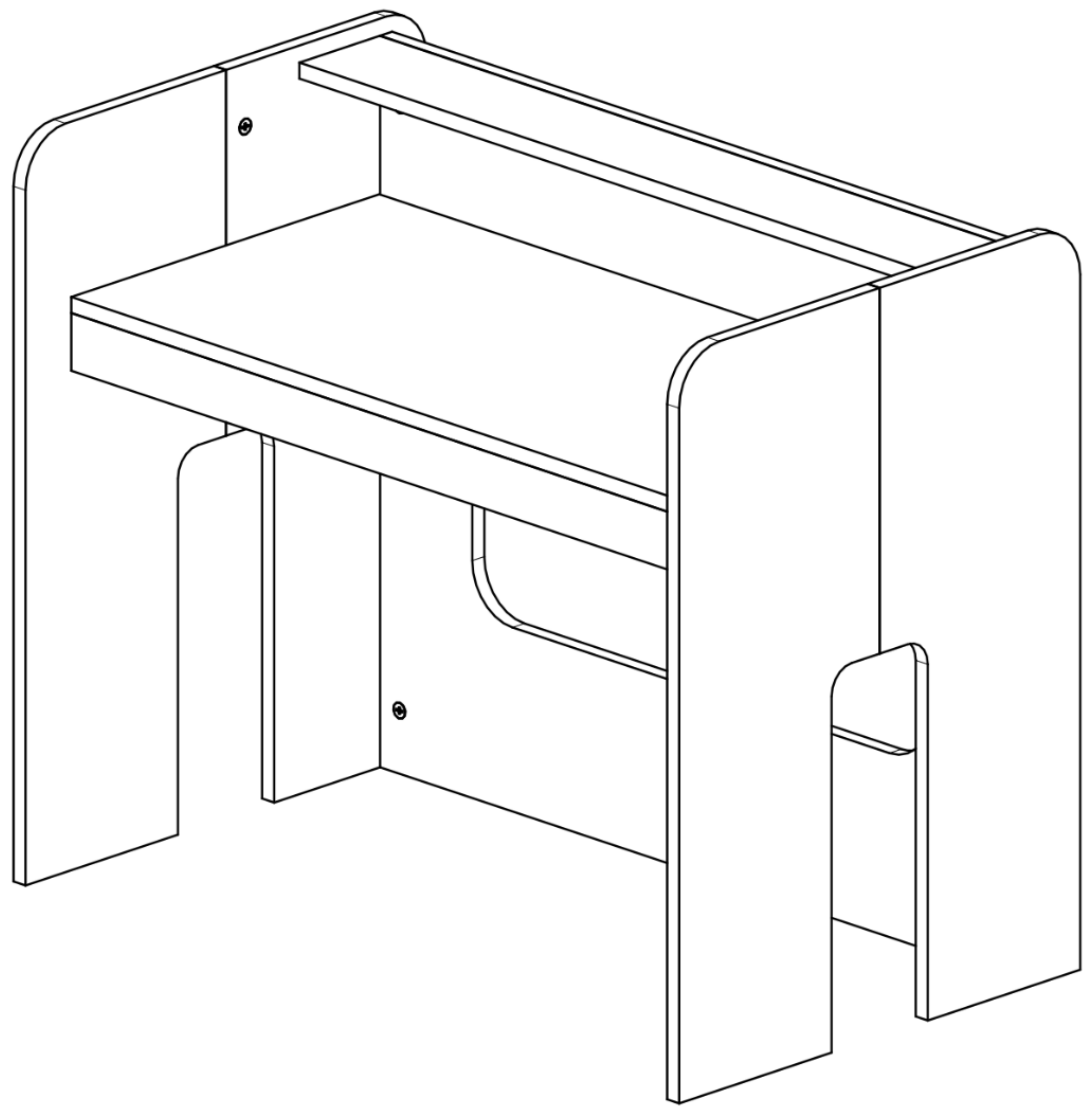





MIMI KR

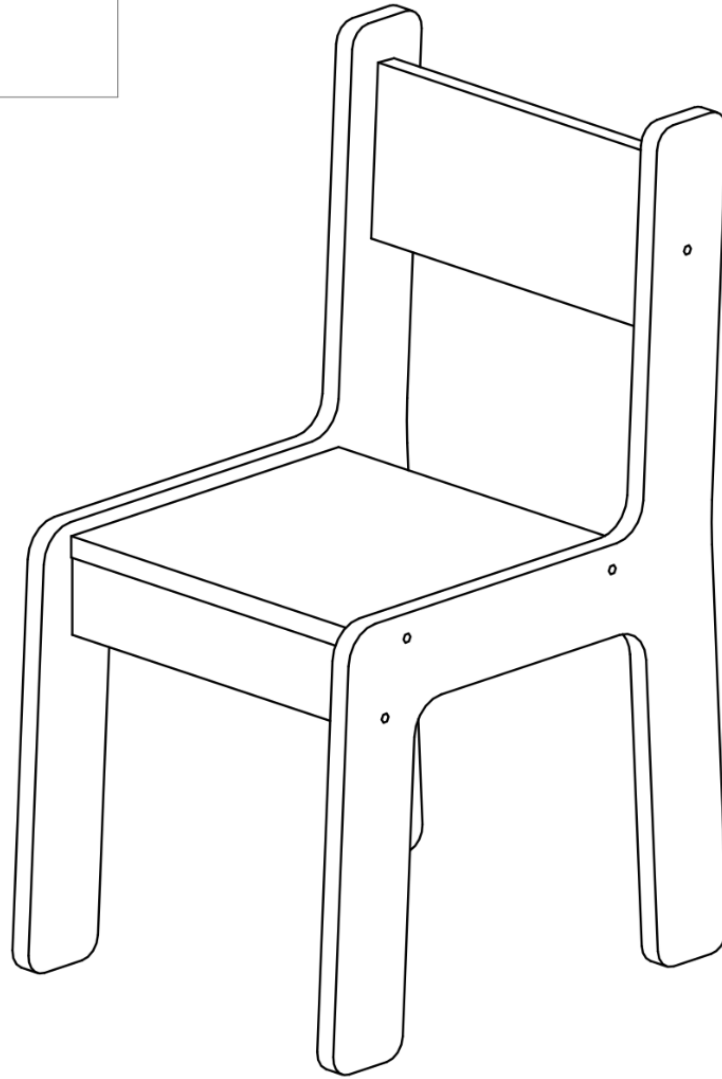

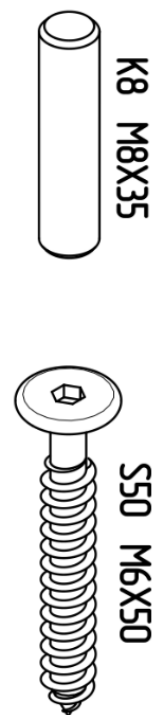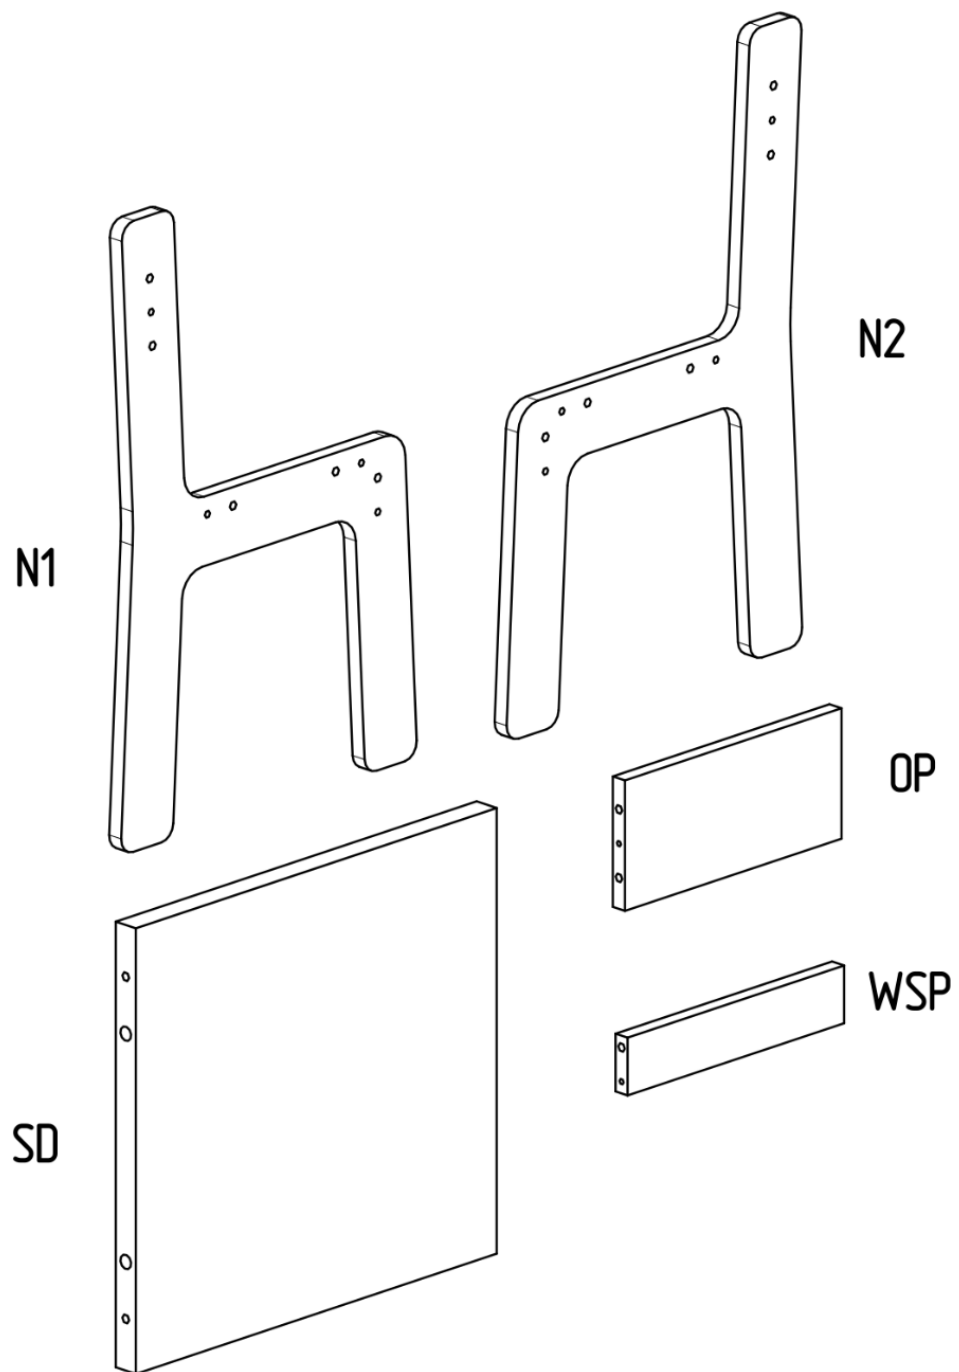


SCREWS	
K8	x10
S50	x8


MIMI KR	
N1	x1
N2	x1
SD	x1
OP	x1
WSP	x1

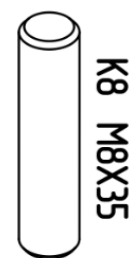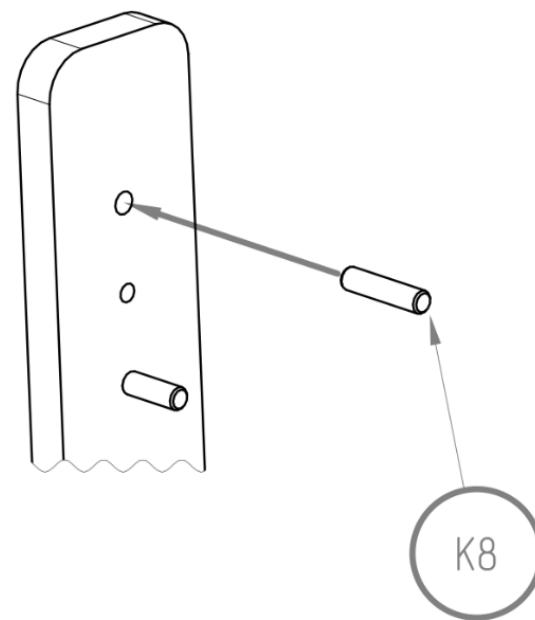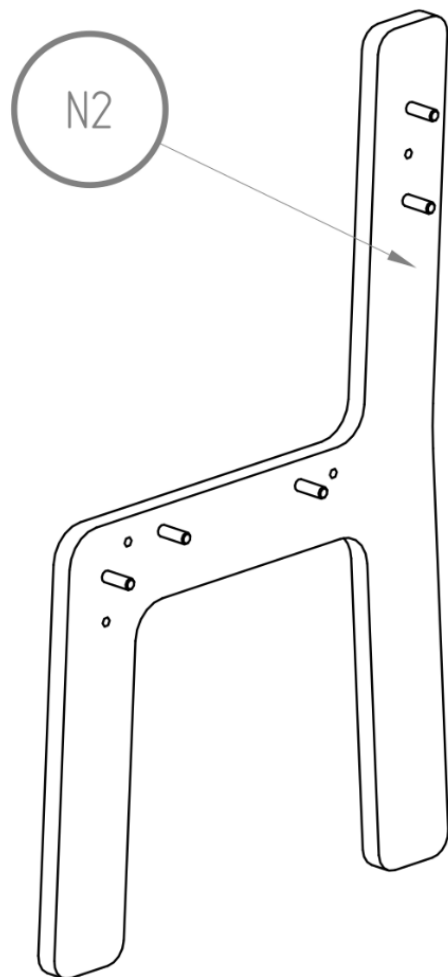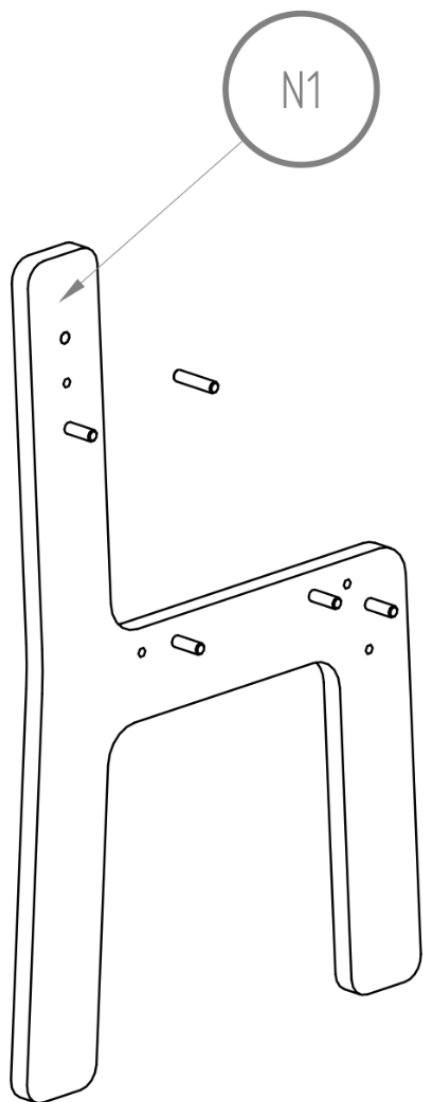


K8 M8X35

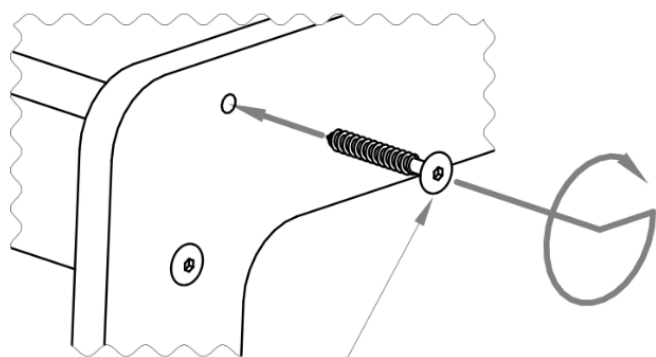


S50

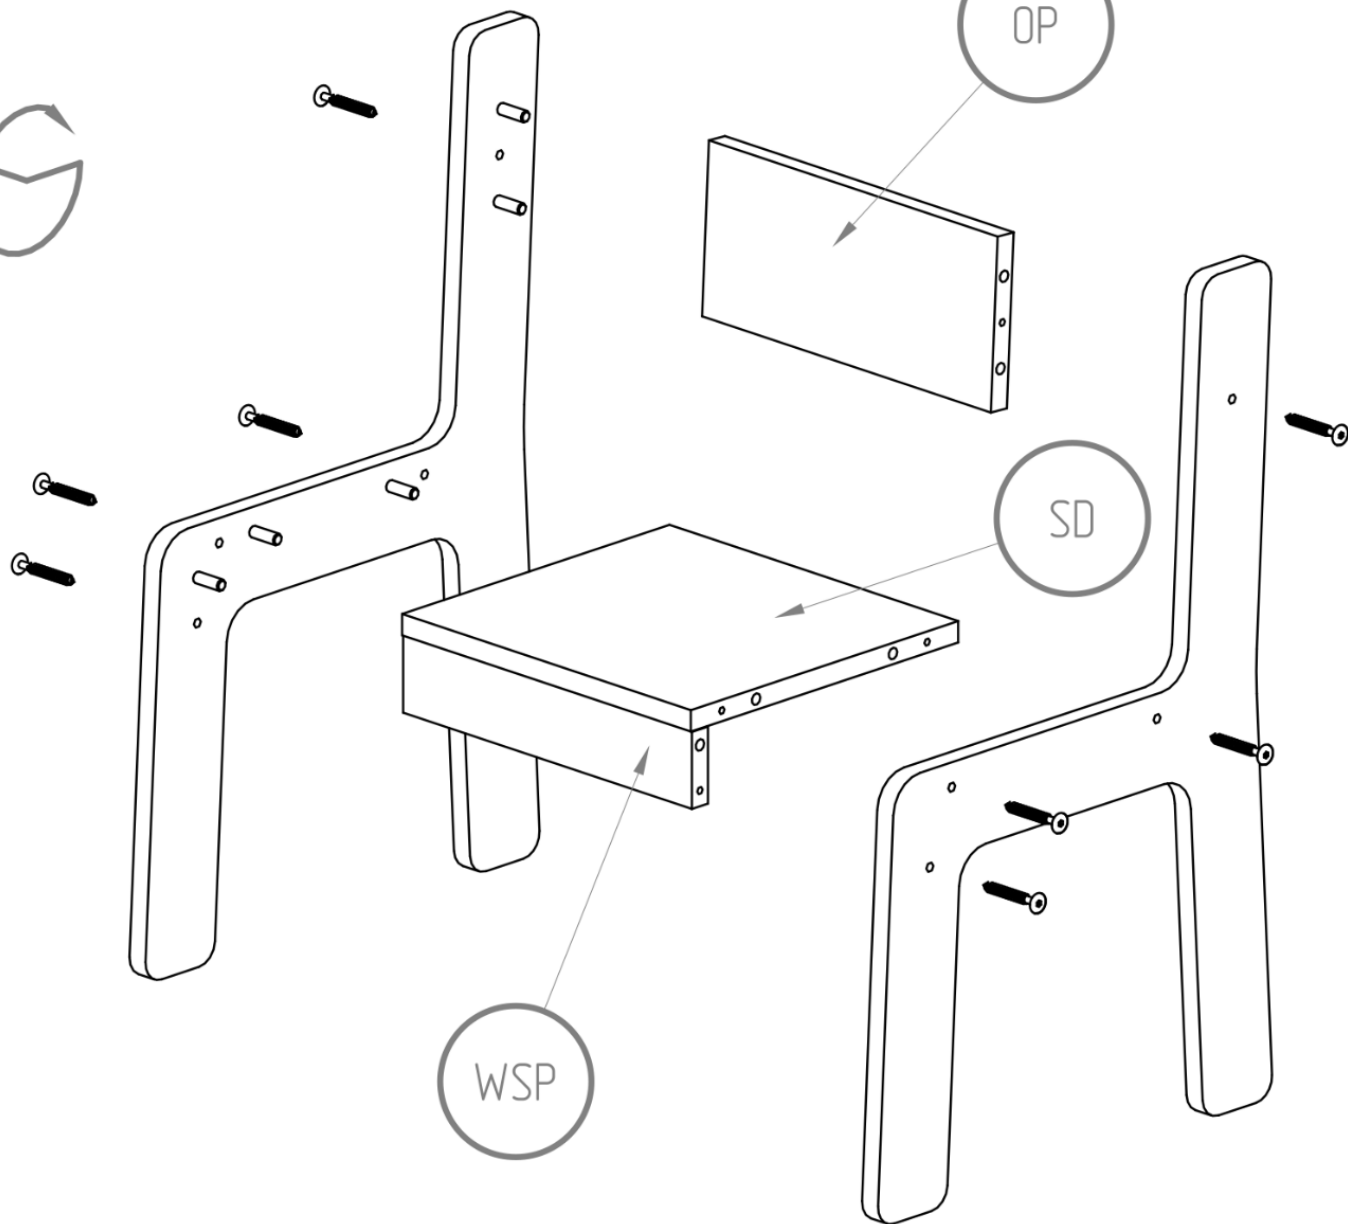

S50 M6X50

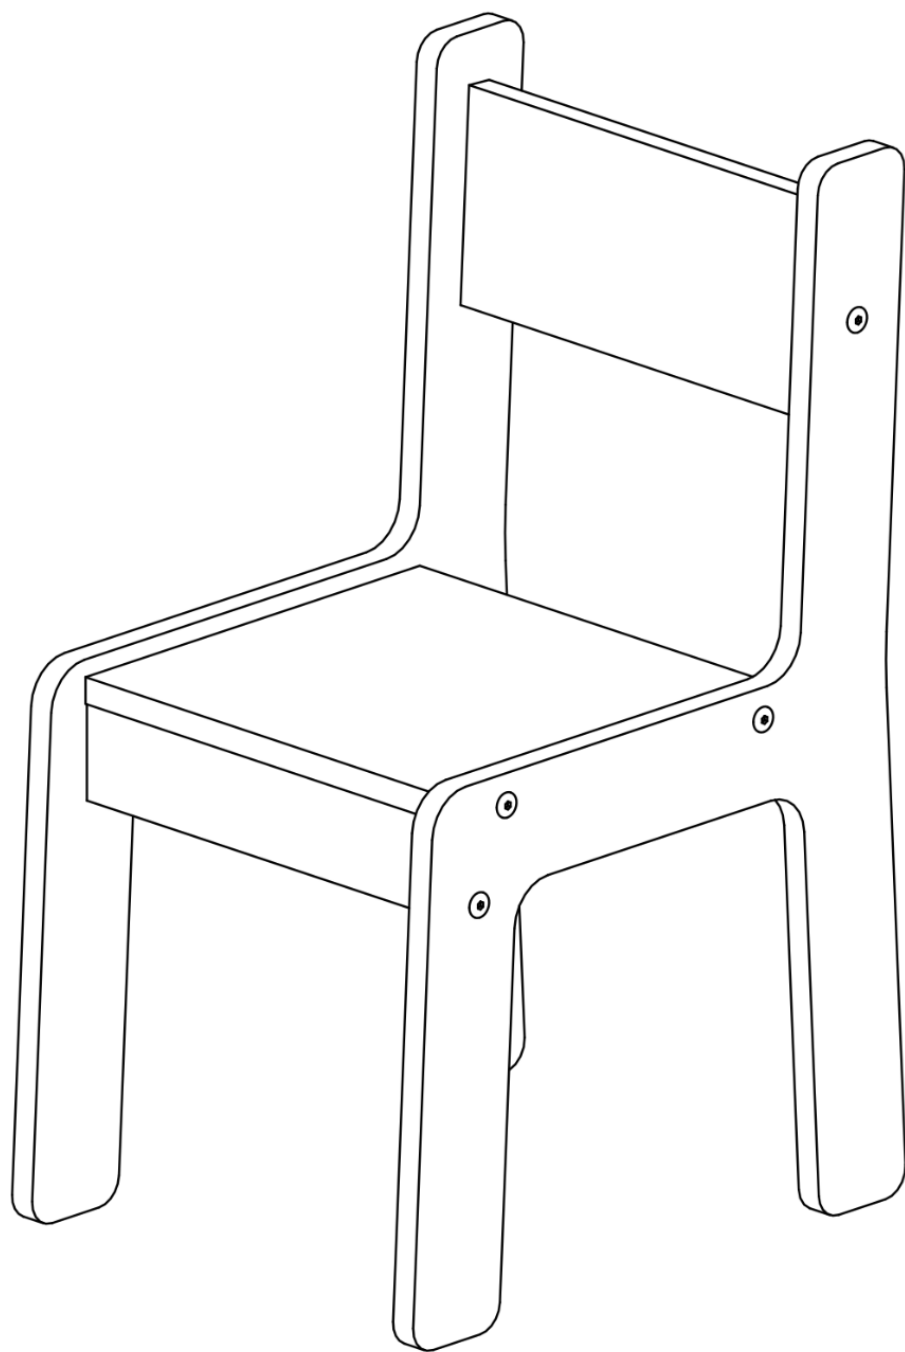

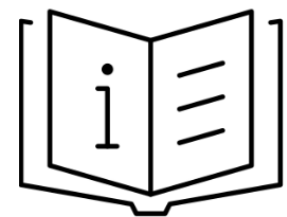

**UWAGA
WAŻNE**



**ATTENTION
IMPORTANT**



**ACHTUNG
WICHTIG**



**ATTENTION
IMPORTANTE**



**ATTENZIONE
IMPORTANTE**



**ATENCIÓN
IMPORTANTE**



Regularnie sprawdzaj,
czy wszystkie
mocowania są
dobrze dokręcone.

Regularly check
that all fasteners
are properly
tightened.

Überprüfen Sie
regelmäßig, ob alle
Befestigungen gut
angezogen sind.

Vérifiez
régulièrement que
tous les fixations
sont bien serrées.

Controlla
regolarmente che
tutte le fissaggi
siano ben stretti.

Revisa regularmente
que todos los
elementos de sujeción
estén bien apretados.



Zawsze postępuj
zgodnie
z instrukcjami montażu
i użytkowania
producenta.

Always follow the
manufacturer's
assembly and usage
instructions.

Befolgen Sie immer
die Montage- und
Gebrauchsanweisungen
des Herstellers

Suivez toujours les
instructions de montage
et d'utilisation du
fabricant.

Segui sempre le
istruzioni di
montaggio e utilizzo
del produttore.

Siempre sigue las
instrucciones de
montaje y uso del
fabricante.



Korzystaj wyłącznie
z oryginalnych
części zamiennych
dostarczonych
przez producenta.

Use only original
spare parts supplied
by the manufacturer.

Verwenden Sie nur
originale Ersatzteile,
die vom Hersteller
geliefert werden.

Utilisez uniquement des
pièces de rechange
d'origine fournies par le
fabricant.

Utilizza solo pezzi di
ricambio originali
forniti dal produttore.

Utiliza únicamente
piezas de repuesto
originales
proporcionadas
por el fabricante.



Zapewnij
odpowiednią
wentylację
pomieszczenia,
aby uniknąć pleśni.

Ensure proper
ventilation in the
room to avoid mold.

Sorgen Sie für eine
angemessene
Belüftung des Raumes,
um Schimmel zu
vermeiden.


Assurez une ventilation
adéquate de la pièce
pour éviter la moisissure.

Assicurati di ventilare
adeguatamente la
stanza per evitare
la muffa.

Asegúrate de
proporcionar una
ventilación adecuada
en la habitación para
evitar el moho.

ADDRESS

SMARTWOOD
Łazy 103a
37-550 Radymno

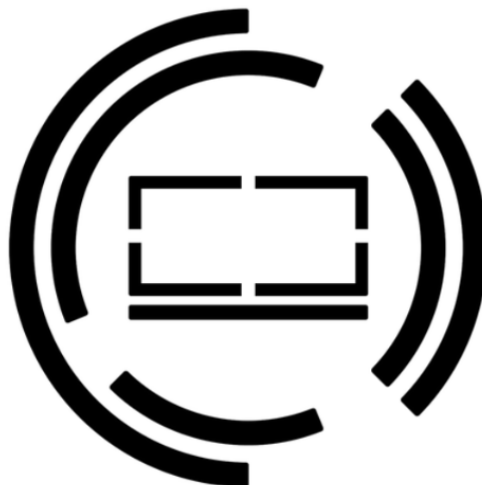

smartwood®

CONTACT

PL

shop@smartwood.pl
+48 535 982 922

ENG/DE/FR/IT/ES

*Support only in German and English

shop@smartwood.de
+49 160 98618205

SCAN
ME

smartwood.pl

smartwood.de

